

Zeiss LSM 510 Meta

Durham University
School of Biological & Biomedical Science
Centre for Molecular Imaging

Table of Contents


Turning on the system	3
Creating a database for image storage.....	4
Turning on the lasers	5
To view specimen in the transmitted mode, e.g. bright field	6
To view specimen in the fluorescence mode	7
Using the Zeiss software to safely change objectives and reflectors (Filter cubes).....	7
Acquiring a confocal image of your sample with the Lasers	8
Choosing a configuration:.....	9
Single Track vs. Multi Track	10
Image optimisation	13
Acquiring your final image.....	15
Notes on image optimisation	16
Zooming.....	18
Z Sectioning.....	20
Time series.....	22
Finishing up / Shutting down.....	24
Opening your images offline	26
Image Processing & Analysis	27
Scalebars & Measurements	27
3-D stack display options	28
3-D Projection	29
Exporting Files to .tif Format	29
Image formats.....	30
Image window menu	31
Colocalization measurements	35
Meta detector.....	38
Lambda mode	38
Linear unmixing	38
Online fingerprinting	39

Operating the Zeiss LSM 510

Turning on the system

1. Press Remote Control switch to on.
2. Turn mercury lamp on by pressing the black power switch on the Lamp Control housing. The lamp should ignite within a few seconds allow a five minute warm up. Make note of lamp hours in user log.
3. Turn on the computer as normal, Windows 2000 will load automatically.
4. Log on to Windows by simultaneously clicking Ctrl, Alt, and Del.
5. Enter your Username and Password.
6. Double click the **LSM 510 META** icon.

The LSM 510 switchboards will appear. Click **Scan New Images** and then **Start Expert Mode**. If Scan **New Images** is not pressed, the software will start but will not initialize the hardware.

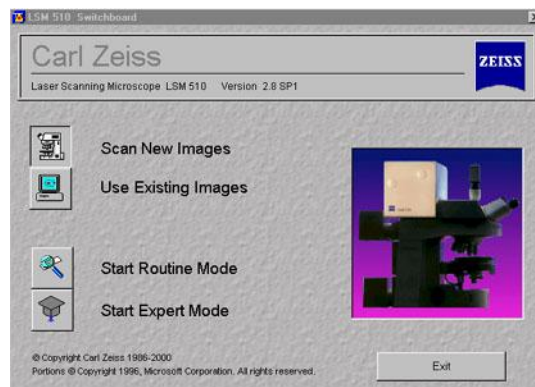


The Main menu opens up. The LSM will go through a CP initialization and open a tool bar labeled LSM 510 expert mode.



Creating a database for image storage

1. Press “**File**” button from LSM 510 tool bar.
2. Press “**New**” button. This will allow you to create a new database to store your images, experimental setup and comments from your confocal session. If you have previously created a database, press the “**Open**” button instead of “**New**” button.
3. Type in a data base name in the “**File Name**” field. The name can be as many characters as you like. Before clicking the create button, set the location that the database will be created in by setting the drive in the “**Create in**” field, and opening the appropriate folder in the folder by double-clicking on a folder icon from the list displayed.
4. Click the “**Create**” button. *All images that are saved during your confocal session will be automatically saved in this database.*

Databases created on the LSM510 will be in a proprietary *.mdb format. *Files in these databases are in a proprietary .ism format, but they can be exported to standard formats for use in other programs.*

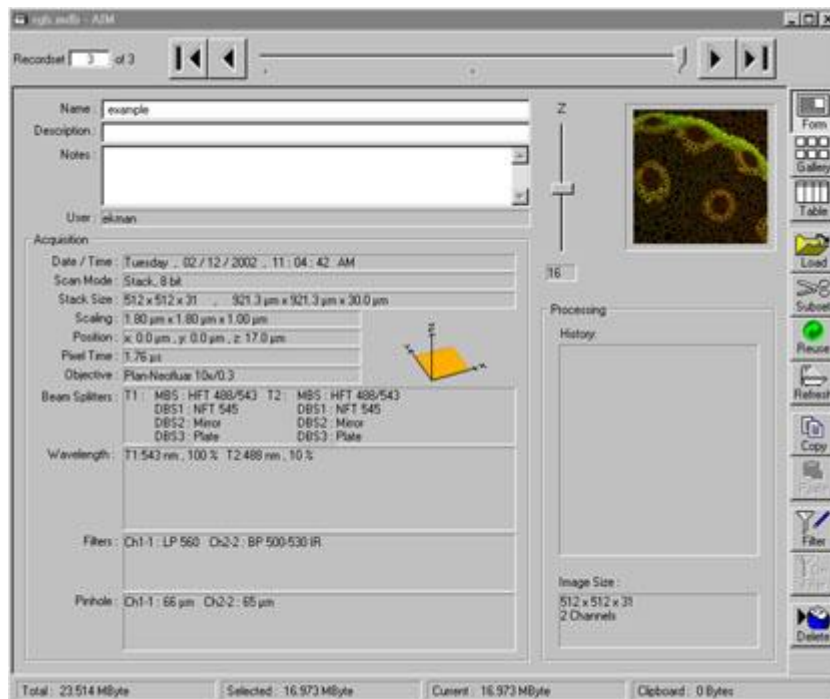

Turning on the lasers

1. Click **Acquire**. This opens up a sub menu.




2. Click **Laser** button in sub menu.
3. You will see a “**Laser Control**” menu with a list of available lasers. Using the mouse, click on the laser(s), which has the appropriate wavelength to excite the dyes labeling your specimen.

Preferably let the lasers warm up for 30mins before you collect images, 15 mins are normally enough.

4. For Argon, first click **Standby**. The Warming up message appears in the line Status. After a short time this will change to **Ready**. Now press **On** and then increase the Tube Current to 6.1A by increasing the **output** to approx 50%.

In the case of the Blue diode and HeNe lasers, just click the On button.

When all the **Status** reads **Ready**, close the Laser Control window.

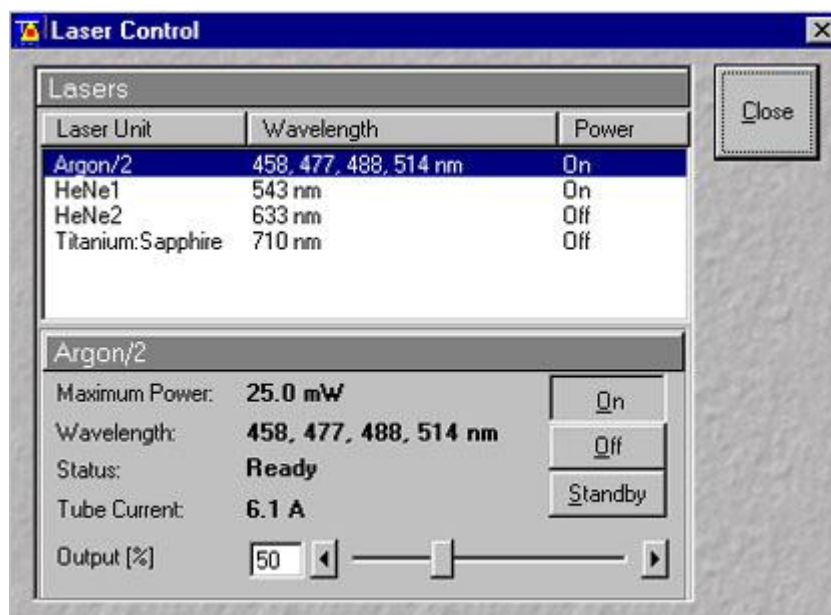

To view specimen in the transmitted mode, e.g. bright field

Change the microscope-light path to direct the emitted fluorescence is sent to the eyepieces by clicking on the **ACQUIRE** on the main menu then **VIS** in submenu. To change the specimen raise the head, load your slide, cover slip down, add oil to your slide before loading, lower the head. Then change to the desired objective, then raise the stage, in that order. It is best to start with the 10x objective raise the stage and find focus, this will prevent damaging very expensive oil lenses.

- a) Set the Reflector Turret position to 1.(No filter set in the light path)
- b) Press the HAL button(on left hand side of microscope).
- c) Place your specimen on the stage, with oil if necessary, it should go on the stage coverslip side down.
- d) For **Phase contrast** match the condenser with the objective.
- e) Adjust the light intensity as needed.
- f) Focus using the course and fine focusing knobs on either side of the microscope.
- g) The motorised specimen stage is moved with either the joystick or round wheel for fine movement




To view specimen in the fluorescence mode .

- a) Switch of the transmitted light, press **HAL** button.
- b) Choose the appropriate filter set for your sample using the **REFLECTOR TURRET**. **FS2** for Dapi, **FS10** for FITC or **FS15** for TRITC/Rhodamine.
- c) Open the UV source, press **FL**. If all these conditions are met and no fluorescence is present check the light path from the Mercury lamp to the sample.
- d) When you have finished viewing your sample pressing FL again will block the fluorescence from your sample.

Using the Zeiss software to safely change objectives and reflectors (Filter cubes).


Choose **Micro** from **Aquire** submenu and the **Axioplan** Control appears, then you can choose your filter and objective and have the computer raise and lower the stage for you.

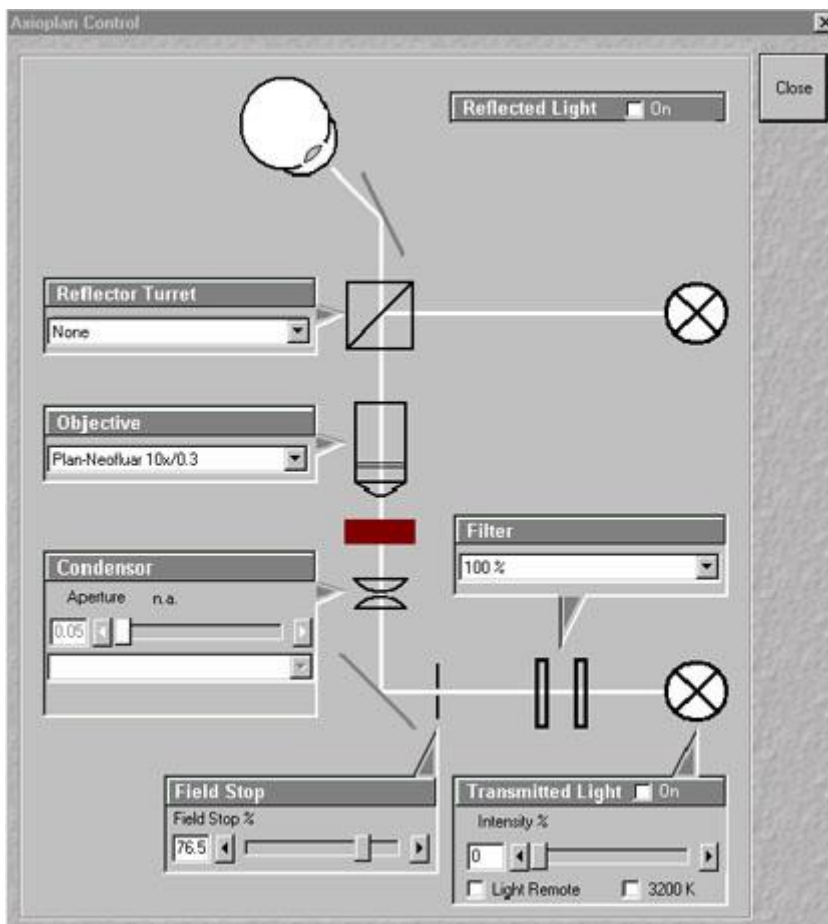

Acquiring a confocal image of your sample with the Lasers

For **LSM** mode click **LSM** in submenu

Click on the **Scan** button in the **Acquire sub** menu. This opens up the **Scan Control** window this will allow you to specify parameters and execute image acquisition.

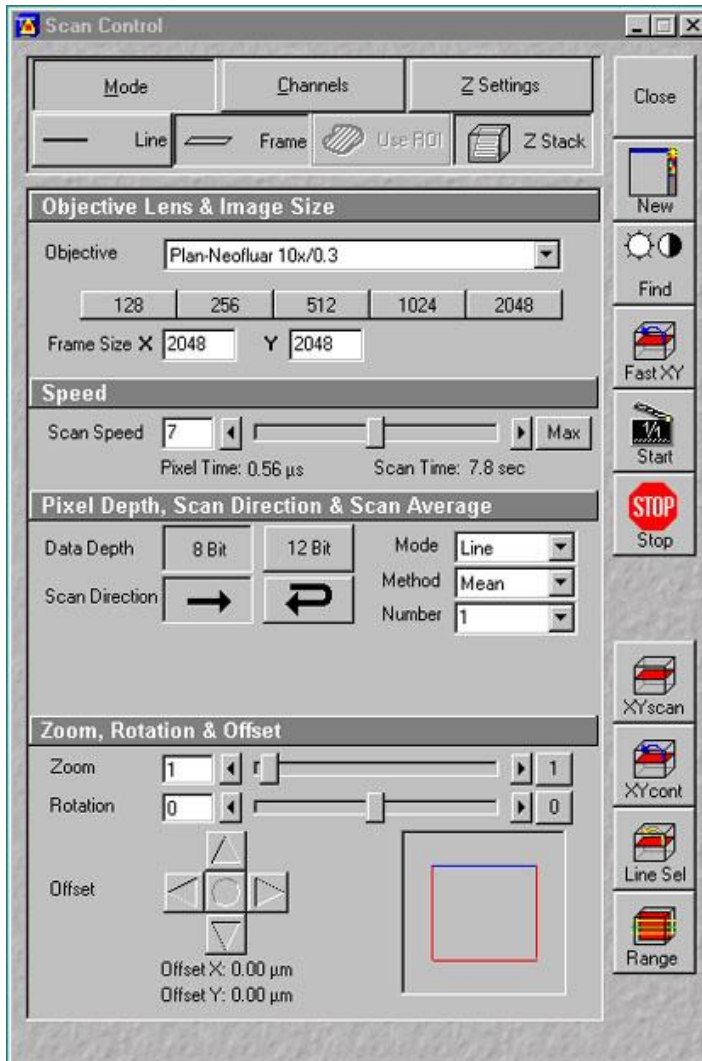


Check the following:

Mode is selected
Frame is selected
Frame size X=512 Y=512 (CAN BE LARGER)
Scan Speed = 6 or 7
Data depth = 8 Bit
Scan Direction = one way (straight arrow)
Zoom = 1
Rotation = 0
Offset = centered

More details about these parameters are given later

[

In the main menu click on the **Config** button in the **Acquire** sub menu. This opens up the **Configuration Control** window.

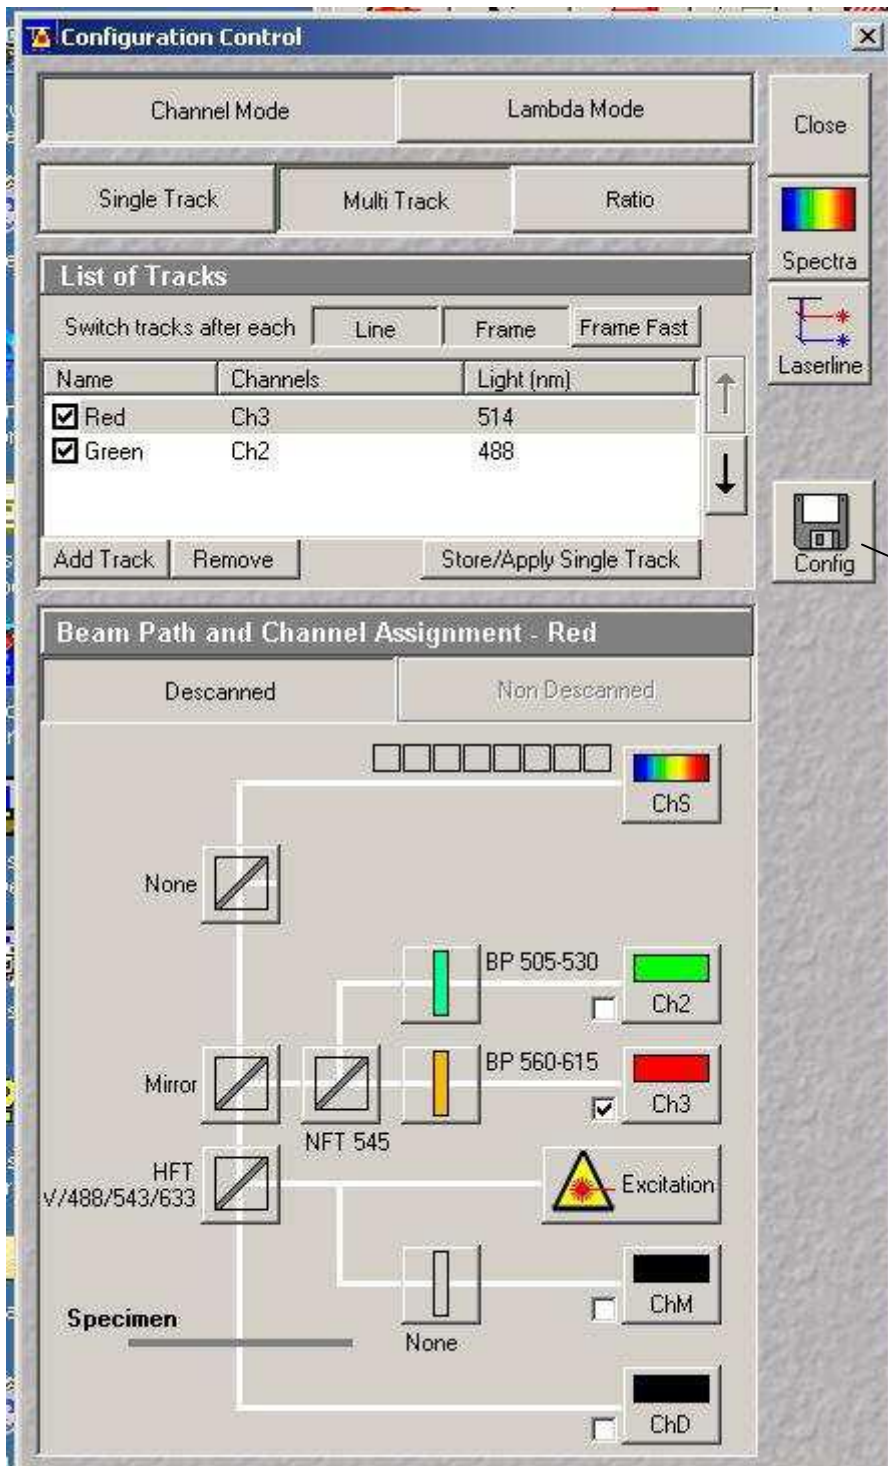

Click here to open Track Configurations

Choosing a configuration:

The LSM 510 has a number of pre-programmed configurations. These configurations specify parameters such as which wavelength, what emission filters and dichroic beam splitters need to be in the beam path, which detector(s) will be used, and much more. Additionally, the pinholes for each configuration are already aligned. The

configurations are very convenient shortcuts. Configurations are selected based on the fluorophore or fluorophors being used. If the excitation and emission spectra for the fluorophore is known, chose the configuration that most closely matches it. (There is a **dye database** in the LSM software. For a list of the excitation and emission wavelengths of the fluors, go to **OPTIONS** on the LSM 510 - Expert Mode window, then click on **DYE DB** .)


Single Track vs. Multi Track: There are 2 types of pre-programmed configurations: Single Track and Multi Track. In most cases, Single Track is used for single-label experiments and Multi Track is used for multiple-label experiments. Single Track can be used for multiple labels as well as single labels, but it is recommended that Multi Track be used for multiple labels. In Single Track, the system excites both channels simultaneously, i.e., the wavelengths are scanned concurrently. In Multi Track, the system collects the data sequentially, switching between wavelengths. This means that you can eliminate bleed through from a second channel in multiple labelling.


For multi tracking with multiple labels choose Multi **Track** in the top row.

Now click the **Config Box**. (See previous figure) The **Track Configuration** window appears.

Scroll to select the desired configuration, i.e. Fitec/Rhodamine. Click Apply.

Alternatively, you can open a previously stored image. In the main menu, select FILE


/ OPEN, then open an image from your database and click REUSE .

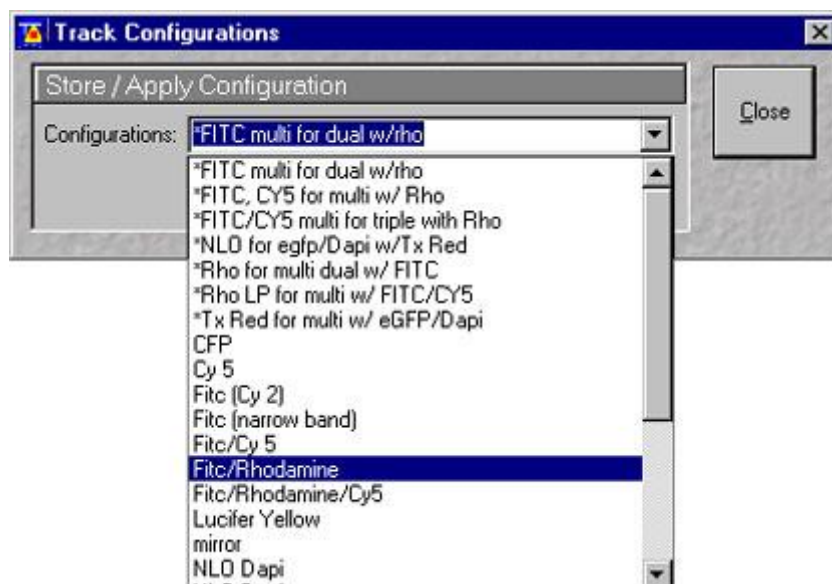

Select the **Channel** panel in **Scan Control** window.

Set pinhole diameter with the **Pinhole** slider scale. The smaller the pinhole, the thinner the optical slice will be and the less light will be collected. A pinhole set to 1 Airy unit (click the 1 button) will have optimal resolution. However, you will probably need to adjust this according to your sample's fluorescence, using larger Airy values for dim samples.

For multi-fluorophore imaging set the pinholes for each channel to produce equivalently thick optical slices.

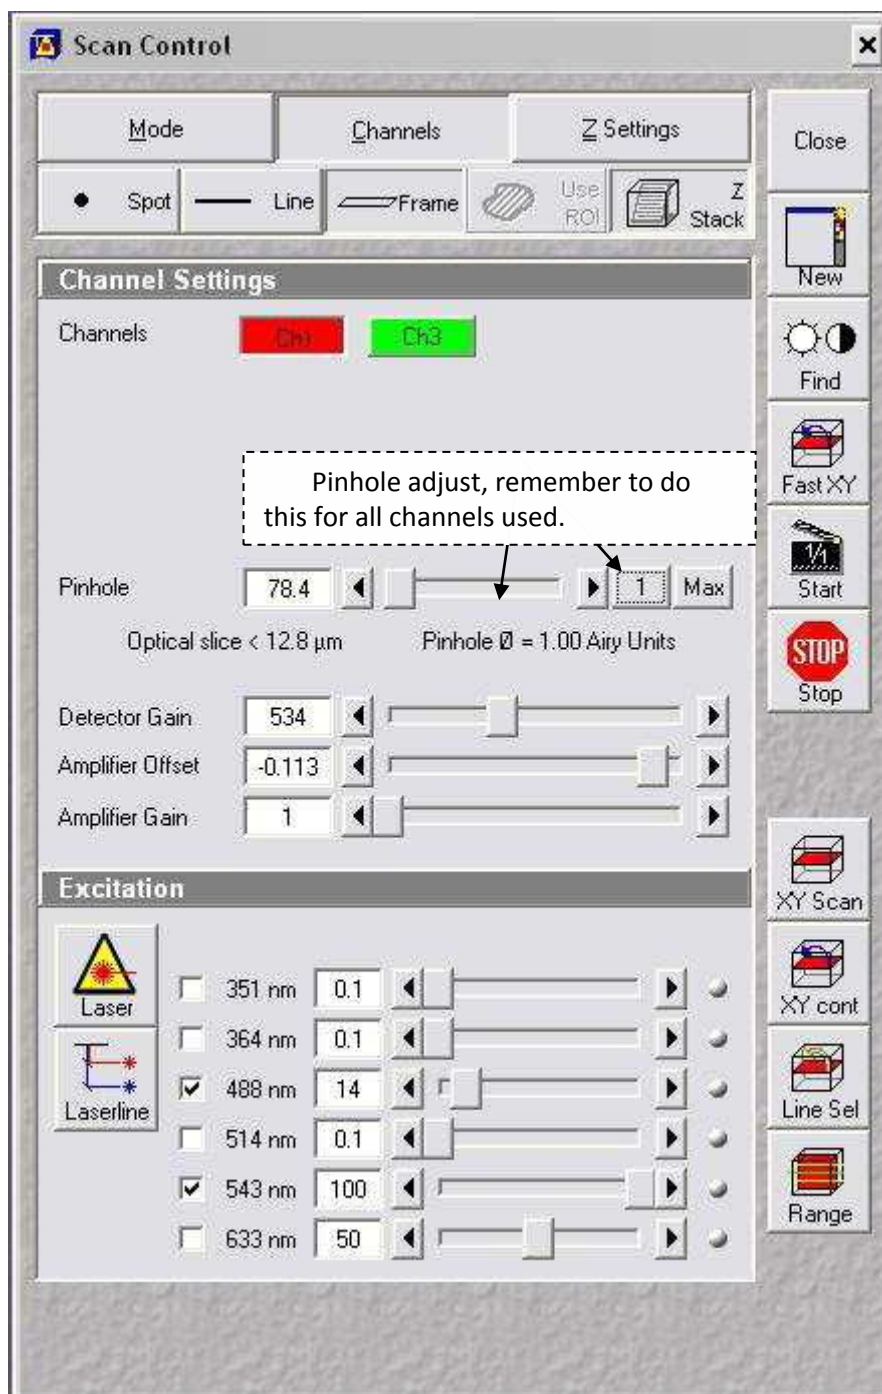


Check the following:

Remember to select and modify all channels used.

Set Airy units to 1 on one channel and with multiple channels make sure optical slices are equivalent for each channel while staying as close to 1 Airy unit as possible. Increase the pinholes of the longest wavelength channels to match the shortest wavelength.


Press the **Fast XY**(Continuous scan) button on the right side of the window. This will start a continuous image acquisition that can be halted by selecting the Stop button. While the laser is scanning, use the Remote XY Stage Controller to search for an interesting area or frame up a good image

Click on the **New** then **Find** button the right side of the **Scan Control** window. An XY-image automatically adjusted for brightness and contrast is produced in the Image window. The image will act a starting point for determining optimal settings

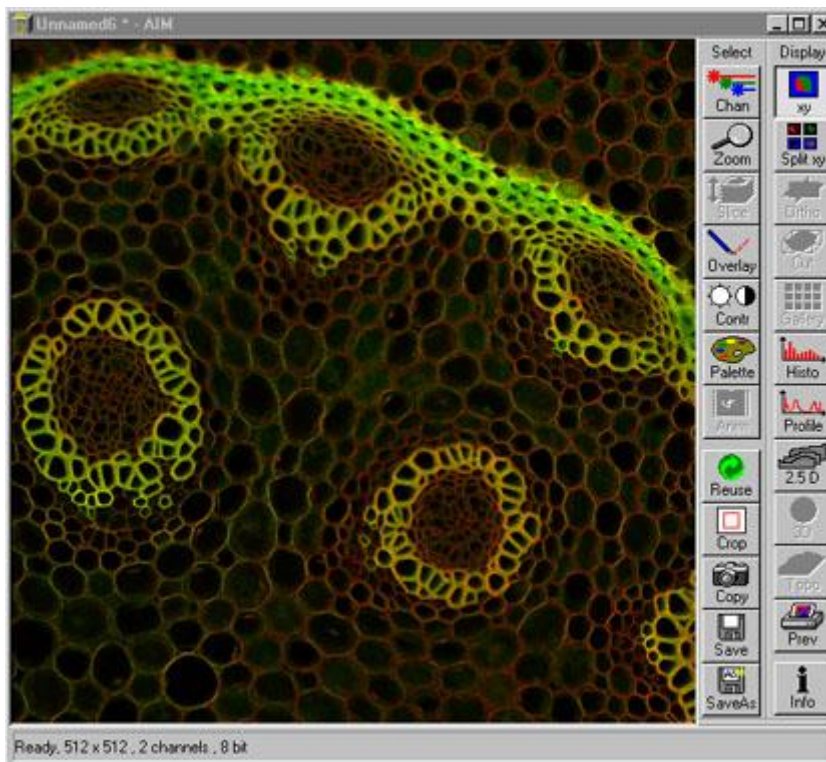

A specimen with 2 or more channels maybe easier to view with a split screen where each channel is arranged side by side and the combined channel placed last.

Click the **Split xy** button located on the right side of the image window.

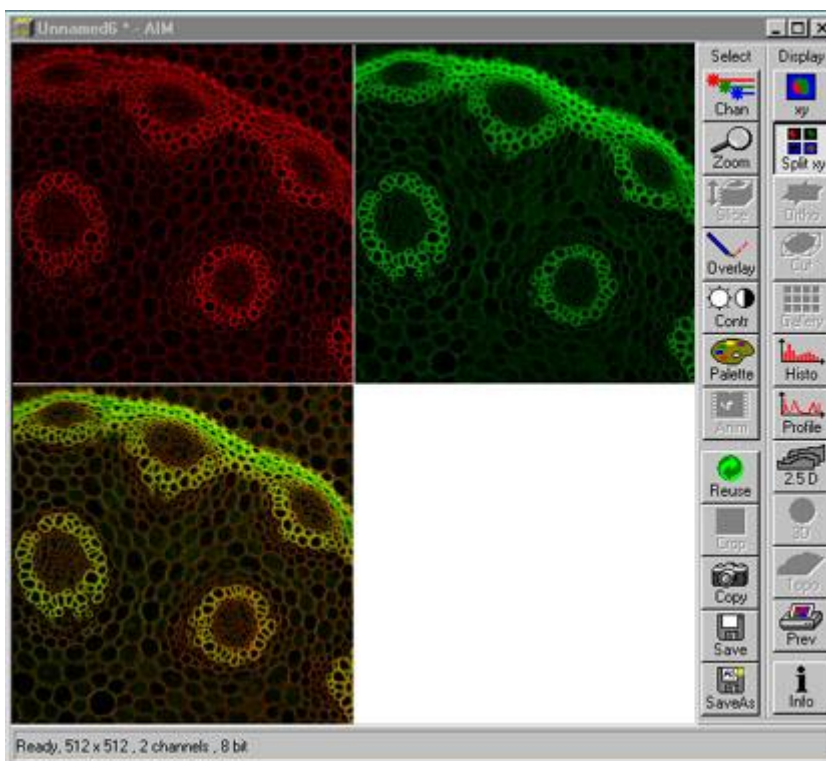

To enlarge the image window click the **Zoom** button then the **In** button in the right hand column. The image will then fill one monitor screen completely. So pull the image over to the Right hand monitor then zoom in.


Image optimisation

The pre-scanned image, whether too dim or too bright, usually needs to be optimized.

The PMTs need to be adjusted according to the fluorescence intensity of the sample.


Due to the sequential nature of 'Multi-track' acquisition optimizing the settings in this mode is difficult. It is easier to set the imaging parameters for each **Track** individually. You can do this by switching off each track with the **checkbox** along side it. This is done in the **Configuration Control** window.

Turn off all but one channel now.

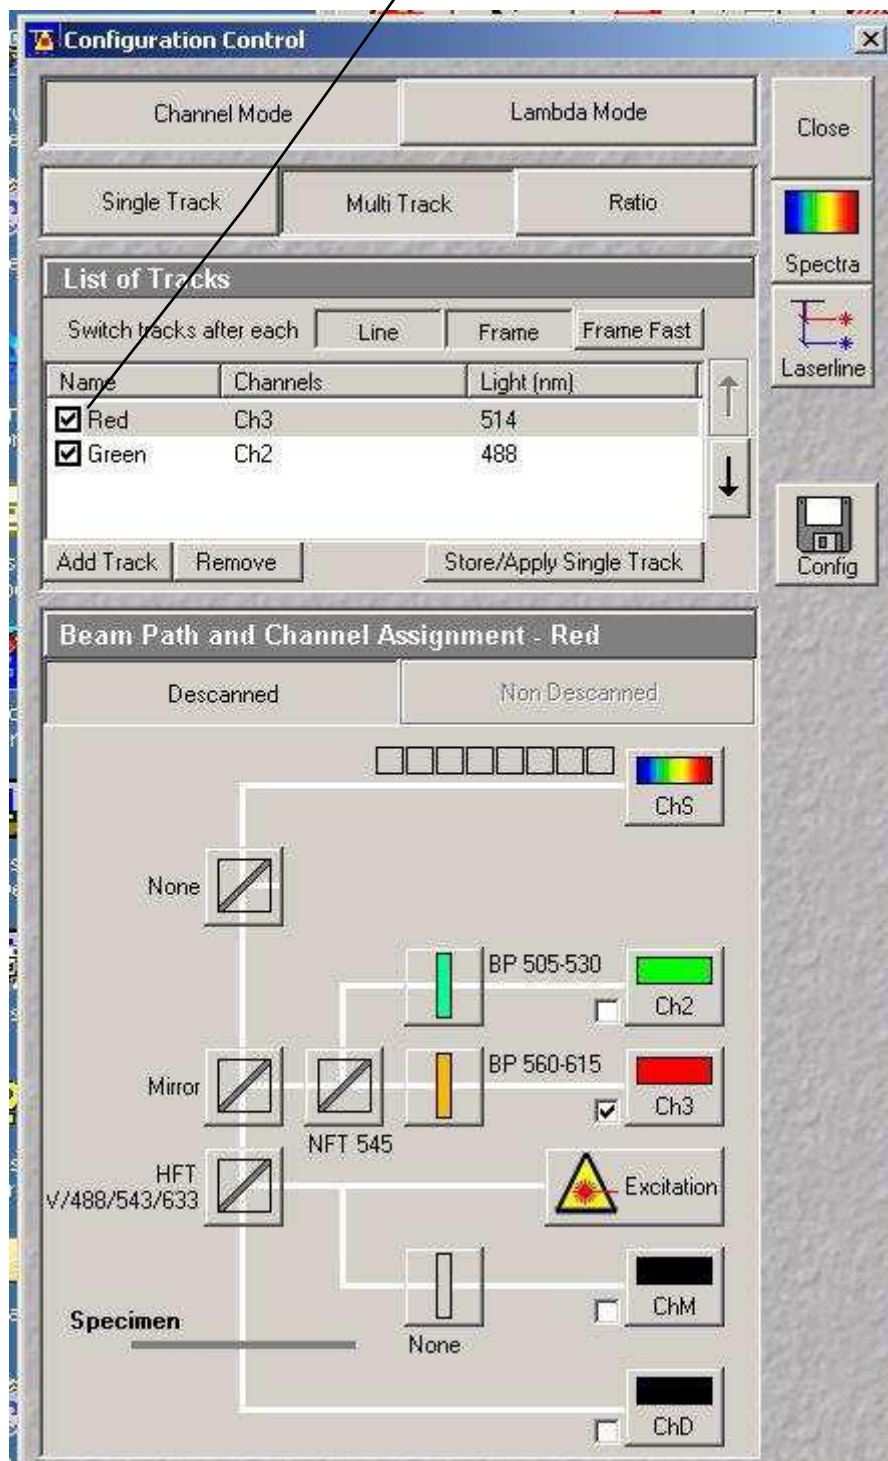

You need to set the detector range to match the dimmest and brightest signal from the specimen (set the full dynamic range of the image). Setting the detectors incorrectly results in the loss of information from the specimen.

In the image window press the **Palette** button and highlight **Range Indicator**. This will produce a monochrome image in the different channels for which the pixels with intensity of 0 are blue and pixels with intensity of 255 are displayed red and assist you in making the adjustments described below.

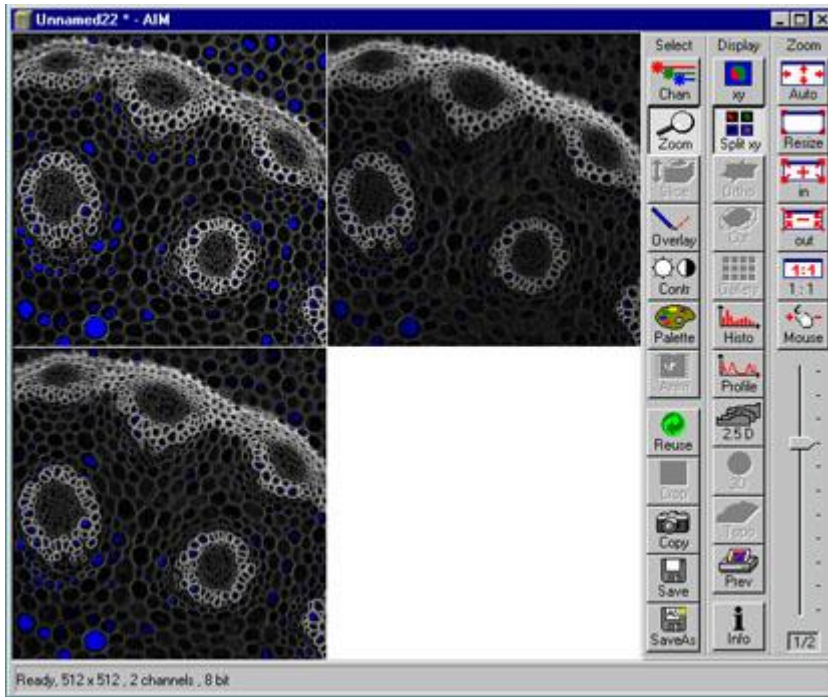

Start **Fast XY** and focus to the area of interest. The sample can be centred in the field of view while the laser is scanning, use the Remote XY Stage Controller to search for an interesting area or frame up a good image. When preparing for a Z stack it is important to manually focus through the specimen's region of interest to find the brightest focal planes and make the final adjustments to the detector based on them. It will also be better to remove any averaging at this point.

Clicking **Stop** in the Scan Control window will turn off the **Fast XY** continuous scanning.

Now start scanning again using **Continuous** scanning.

Set **Detector Gain and Excitation power** –

The 'max' signal is set by adjusting the **detector gain** and **laser transmission** simultaneously. Adjust % laser transmission(s) in the Excitation Of Track panel at the bottom of the window to the following guidelines. Doing so sets the % laser power let

through by the AOTF. 405 ~20%, 488 ~ 10-25% 514 >50%, 543 100%, 633 100%. You need to empirically work out the best laser power settings – low laser power causes less bleaching but requires the detector gain to be set high; which introduces noise and may, if set to above 900, introduce background autofluorescence in that channel. Set the **Detector Gain** until about 10% or less of your the brightest stained areas have red pixel. In the case of a z stack it is better to have only a very few red pixels.

Next move the **Amplitude Offset** until the background is no more than 50% speckled with blue pixels. Clicking the arrows instead of the slider will make it easier to adjust.

If you are viewing multichannels remember do this for all channels used by switching tracks on and off.

Reset the **Palette** to **No Palette**.

Acquiring your final image

Once you are satisfied that each channels detector is set optimally to the range of the image, you can create your final image. Ensure that all **Tracks** are checked when acquiring the final image.

Go to the **Scan control** window and click the **Mode** button.

Under Objective Lens & Image Size, choose a **Frame size** using the buttons provided or you could choose the **Optimal** button

Noise can be reduced by averaging your final image, choose between **line** (default) or frame averaging, using the **mean** (default) or summed intensity of 1,2,4,8, or 16 scans. *The amount of averaging necessary to obtain a good image depends on the signal to noise ratio of your sample image. Low contrast images will require more averaging but be aware that this could cause photobleaching. You can determine the amount of averaging necessary to yield the best image of your sample empirically. As a rough guide, averaging should be set to 100th the gain value, so meaning most samples will require averaging of 4 or 8.*

Scan speed: 6

The default scan speed (when not zoomed in) is 9. Reducing the scan speed can improve a noisy image; faster scan speeds are used to find regions of interest (like during the Fast XY function) or when photobleaching of the sample is a concern.

The zoom and scan field rotation can be set in the Zoom, Rotation, & Offset panel. You may find it more convenient to use the crop function in the Image window - *see the section titled Crop your image for details*. Offset here refers to fine XY movement of the laser.

*When you're "lost" with regards to magnification and offset, you'll want to reset the field view parameters. Go to the Zoom, Rotation, & Offset area at the bottom of the Mode panel. Clicking the **Reset** button at the bottom right will take things back out to the original magnification and offset settings*

When image optimization has been achieved click on the **1/1 start** scan button to generate a single image of the specimen.

To save your image click the "**Save**" or **Save As**" button on the right side of the image. This should default to our folder and to the database you have set up. In the **Name** field, type a name for your image. Further information can be appended to this database entry in the **Description** and/or **Notes** fields.

Notes on image optimisation

To reduce photobleaching attenuate the laser illumination by clicking the Channels button in the Scan Control window. Under Excitation of Track you can reduce the percentage of laser power (Transmission %) for each excitation wavelength. If this is necessary you may need to compensate by readjusting the sensitivity of the detector as described above.

To further improve image quality you can slow down the scan rate or apply averaging to remove random noise, sum to increase signal, or choose a combination of these.

Also, you may increase frame size to higher than 512 x 512 by selecting Mode on the Scan Control and changing the resolution.

512X512 is good for large stacks 50um + or for high n statistical requirements. Fast scanning of stacks, 3.9 seconds a slice, line average of 2 required to remove pixelation.

1024X1024 is good for small stacks 25um and lower or for low n statistical requirements. Average scanning 15 seconds a slice, optional line average of 2

required to remove noise. May not need to be averaged at all. Good for zooming in and cropping

2048X2048 is great for publication quality covers, slow scanning 15seconds to 1minute a slice averaging not required but may be applied.

To change the frame size click the button with the desired frame size. Going to larger frame size will concomitantly increase both the size of the file and time to acquire the stack.

You can adjust the area to be scanned by using the options found in: Zoom, Rotation & Offset under Mode or by using the crop tool.

Changing the scan resolution or scan speed will change the image histogram so the Channels settings should be readjusted.

Line Switching vs. Frame Switching: In Multi Track, there is a choice between Line switching or Frame switching. In other words, you may select whether you want the system to switch tracks after each line or each frame. In Line switching mode, the system scans line by line, switching tracks sequentially. For example, if the first line is A®B and the second line is C®D, the system will scan A®B with Laser 1, then scan the same line with Laser 2, then scan C®D with Laser 1, etc. [Note: This is if the system is set for unidirectional scanning (see page 10). In bi-directional scanning, the system would scan A®B with Laser 1, then B®A with Laser 2, then C®D with Laser 1, etc.]


In Frame switching, the system scans the entire X-Y plane with Laser 1, then goes back to the start and scans the X-Y plane with Laser 2.

Line switching vs. Frame switching: In Line mode, you cannot change dichroic filters between scans, because there is not enough time at the end of the row. In Frame switching, you can change dichroic filters between scans, so there may be occasions when you need to use frame switching to acquire a difficult image. Frame switching is not a good choice for kinetics, however, as there is such a time lag between the 2 collections (i.e., before the same pixel is scanned the second time).

Zooming

This function is a true zoom performed upon image acquisition - the laser will scan a user-defined region of interest and display the scan data in a user-defined frame size (512x512, etc).

1. Select **Crop** from the image window's Display toolbar. A crop box appears in the current image window. Move the mouse over the crop box to change the zoom, offset, and rotation of the cropped scan.

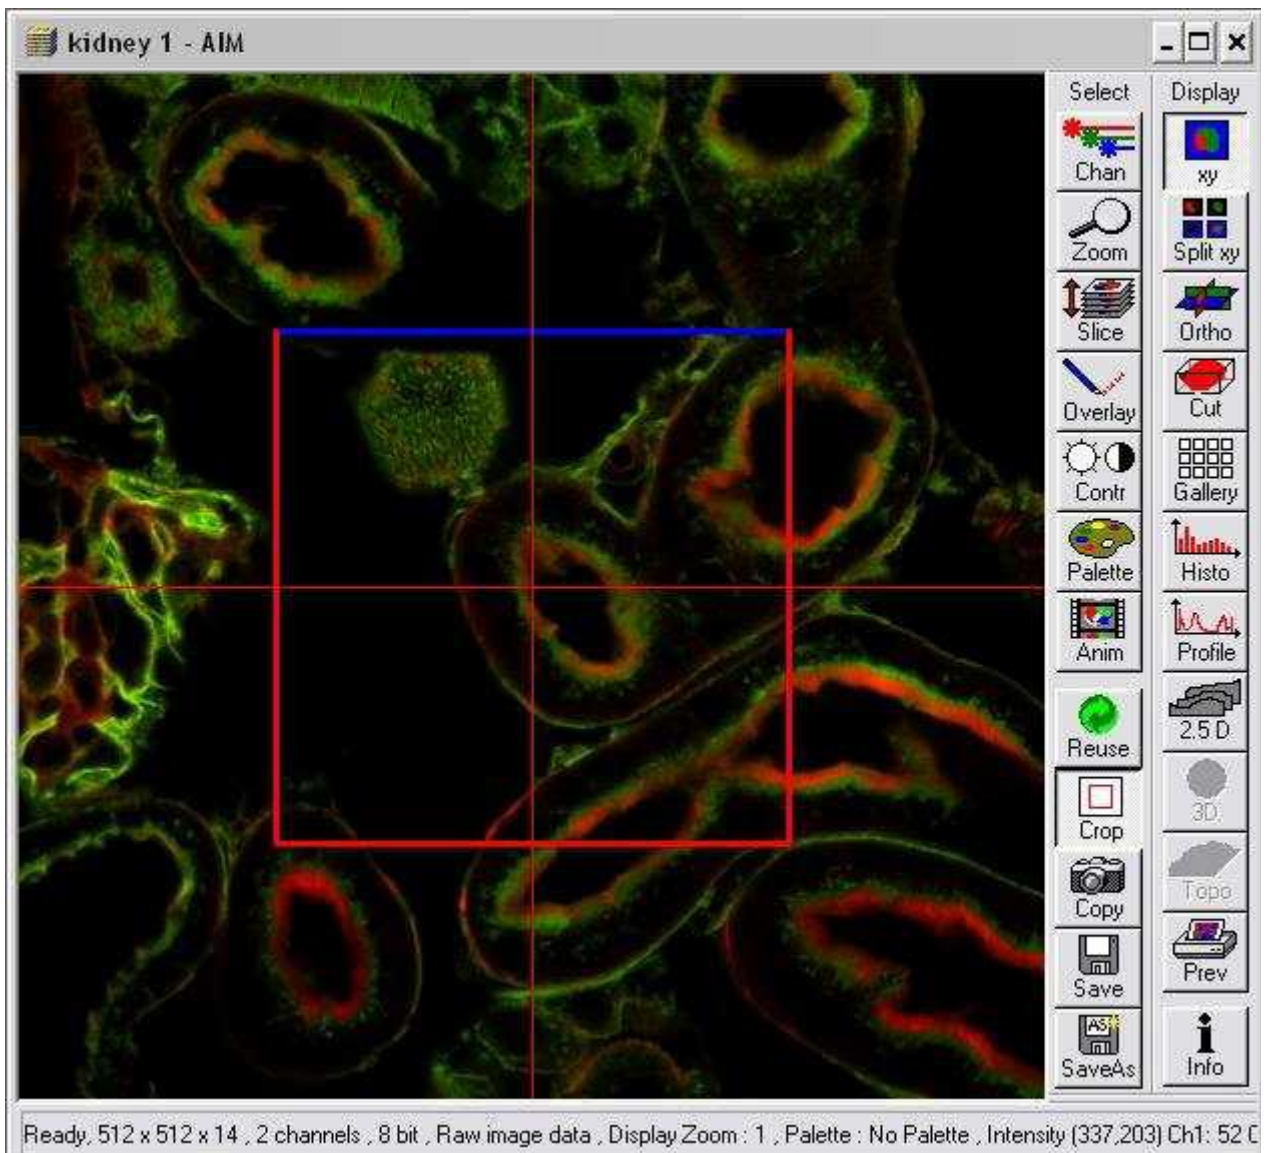

2. To set the offset, position the mouse inside the crop box. The cursor will change to an icon of perpendicular arrows indicating direction in the X and Y dimensions. Use the left mouse button to drag and drop the crop box to the desired offset position.

3. To set the zoom of the scan, position the mouse over a corner of the crop box. The cursor will change to an icon indicating zoom in/out relative to a centerpoint. Left-click and drag until the desired zoom has been achieved. Release the

mouse button at this time.

4. To rotate the scan, left-click on an end of the crosshairs and drag to set your desired rotation. The cursor will change to a circular icon indicating rotation around a centerpoint. The blue side of the crop box indicates the top of the new cropped scan that will be acquired. Release the mouse button once you've achieved the desired rotation.

5. To make your image frame rectangular, left-click on any of the intersections between the crosshair and sides of the square. The cursor will change to up/down or side-to-side arrowheads, depending on the dimension you want to change. That side can then be dragged and dropped to the desired frame size.

Z Sectioning

Once you have set up your image as defined in the above section, you can collect a series of confocal images through all or any of the focal planes of your specimen. To collect a series of images at different points along the z-axis the settings can be inputted in two ways: **Z Sectioning** or **Mark First/Last**.

Z-sectioning – takes x slices at a particular z interval *and assumes the user has prior knowledge of the specimen's thickness and/or is willing to guesstimate thickness.*

Mark first/last – the operator sets the top and bottom of the sample and selects either the interval or number of slices (the other is calculated for you).

Details for Mark First /Mark last

You may set the number of slices or the interval depth. Start by first determining the total volume to scan.

1. Press the “**Z Stack**” button on the “Scan Control” menu this activates the Z Settings panel.
2. If you have slowed the scan rate or have set image averaging, it is a good idea to temporarily resume fast scanning to find the lowest and highest points of focus. Do this by clicking on “**Fast XY**” Also you will find it easier when multi-tracking to uncheck all but one of the channels, as you did when setting channel parameters.
3. Click on **Mark first /Mark last** slice.
4. Click the “**XY cont**” button to start scanning and determine the start and end points of the Z stack. Z sectioning is usually performed moving into the specimen; away from the coverslip. However starting deep reduces photo bleaching at the dimmest point. To find the starting point for the Z stack focus toward the coverslip (rotate fine focus knob toward you) until you reach the point at which you'd like to begin the Z stack.
5. Click “**Mark First**” button to set upper position of Z-stack
6. Focus through specimen until you find the last image of your Z-stack
7. Click “**Mark Last**” button
8. Click Stop button to end continuous scanning
9. Assuming you have already adjusted your pinholes as described on page 9 look up the optimal z interval thickness by clicking **Z Slice** at the top of the Z Settings box. This will open the Optimal Slice window. Optimal z interval thickness for the objective currently in use will be displayed in this window. Clicking **Optimal Interval** in the lower left corner of the window will set the z interval of your z stack to the recommended

thickness. (note: optimal interval will most likely change the number of slices you are taking. Be sure to check this and take smaller number of slices if appropriate.)

10. For 3D reconstructions press **x:y:z=1:1:1** this ensures cubic pixels and no stretching or squashing of the image will occur.

11. Remember to check all Tracks again and reset any averaging.

12. Press **1/1** and the Z stack will be collected.

13. The collected z stack is *temporarily* stored in the computer's memory. To permanently store the stack, use **Save** or **Save As** in the image display window to save it to your database.

Time series

The Time Series is a versatile software function that is useful in a variety of situations – from collecting single confocal images or entire z stacks over time to more sophisticated applications such as FRAP. If desired, a delay between the beginning of one scan process to the beginning of the next can be set. It is important to note that Time Series works *at only one location* on the slide. To apply the Time Series function to *multiple stage locations*, you will have to use the Multitime macro.

The following instructions are for applying a *basic* Time Series. It is assumed that the user has optimized and set all imaging parameters beforehand (pinhole size, detector gain/offset, scan time, averaging, and if desired, z stack).

1. Select the **Acquire_ Time Series** submenu.
2. In the Start Series panel, choose between a **Manual** start or a timed start via **Time**. Most users want a manual start. If a timed start is desired, enter a start time in the **Time (h:m:s)** field. The time series will start when the set time is reached according to the computer's clock.
3. In the End Series panel, enter the number of time points desired in the **Number** field if a **Manual** end is selected. For a timed end point, depress **Time** and enter the end time in the **Time (h:m:s)** field.

In determining an experiment's length and the number of time points needed it is important to consider the scan time and averaging settings (see the Speed section of the Mode panel in "Scan Control"). Both parameters influence how long it takes the laser to clear the scan field and thereby define the minimum time between time points.

4. The next panel you encounter will be either Time Interval or Time Delay, depending on the settings of your Time Series register (see **Options_ Settings**). Time Delay is defined as the end of one scan process to the beginning of the next, while Time Interval is the time between the beginning of one scan process to the beginning of the next. Either panel, Time Interval or Time Delay, permits time series scan parameters to be activated or changed from experiment to experiment.

You may load & **Apply** previously saved time series settings using the pulldown menu in either of these panels. Or you may choose to manually enter scan parameters into the **Time** and **Unit** fields. If you foresee performing other experiments with identical time scan settings, you should **Store** your manually entered settings to the dropdown list for easy reference in the future.

5. Click **Start T** in the right-hand side of the Time Series window to start your time series.


6. The collected time series is *temporarily* stored in the computer's memory. To permanently store the series, use **Save** or **Save As** in the image display window to save it to a database.

Finishing up / Shutting down

- If another user is following you in then all you need to do is to log off the computer and clean up as outlined below.
- Select **Argon/2** laser unit
- **Set** Argon/2 laser **Output (%)** to minimum (25%)
- Switch to stand by
- If another user is arriving within the next two hours (see booking page) the lasers may be left running
- If another user is not arriving ensure that all lasers are powered **Off**

The last user of the day who is booked is responsible for ensuring that system is shutdown. If you have cancelled on the same day then:

- Contact previous user, or
- Call the facility to ensure system has been shut down, or
- Come over to facility to ensure system is shut down yourself.

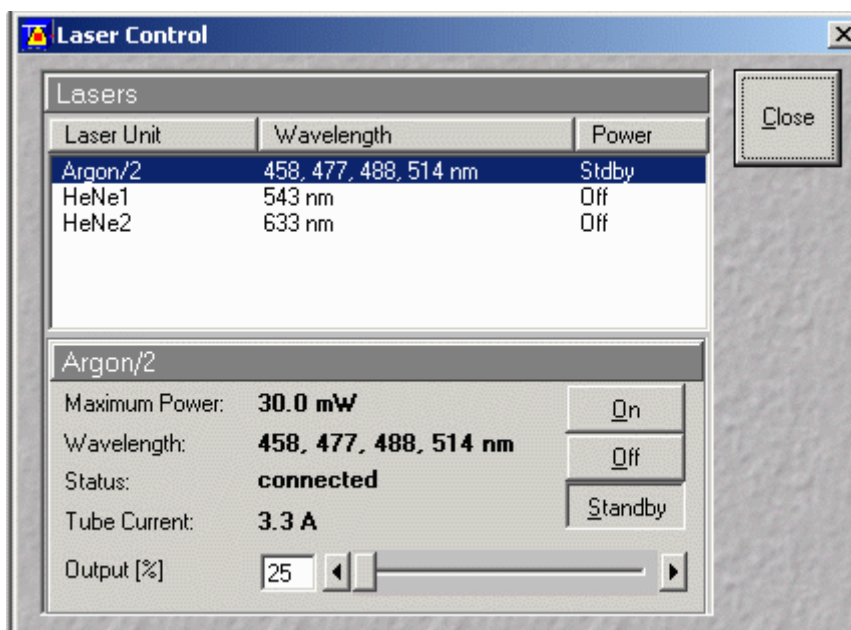

- Laser fans will run for about 5 minutes then turn off automatically (a reduction in noise will be heard)
- Clean up immersion lenses used with lens tissue only

- Blot glass lens element
 - Rub metal barrel
- Clean up oil and fluids from stage
- Exit Zeiss software
- Transfer data to e.g. burn CD, etc.
- Once laser fans have become quiet (automatically powered down) turn **Remote Control** switch off. Switching off before the lasers are cool will seriously damage them.
- Switch off Mercury Arc lamp and sign the daily usage record sheet.
- Log off from the computer and shut it down.
- Replace microscope dust cover.
- Put all used disposable paper products, cans, wrappers, etc. into trash can

It is your responsibility to back up your files and then delete them from the hard drive. It is assumed that all images are backed up and if disc space is required I will delete images to make space!!!!

Zeiss image browser

<http://www.zeiss.de/lsm>

Follow link in lower right hand corner:

“Free LSM Image Browser”

Requires a registration form to be completed and also the download and installation of an extra DAO file if you have Microsoft Office 2000.

ImageJ

<http://rsb.info.nih.gov/ij/>

Plus Zeiss plugin

<http://rsb.info.nih.gov/ij/plugins/lsm-reader.html>

Requires LSM images to be saved “uncompressed”.

WCIF ImageJ is a bundle of plugins along with the core ImageJ files. This can be freelydownloaded from the WCIF website downloads section

<http://www.uhnresearch.ca/wcif>.


It is highly recommended that you copy your entire database (Complete folder) and keep this raw data as it carries with it all of the acquisition data which is lost when images are exported.!

Image Processing & Analysis

Scalebars & Measurements

A scale bar, measurements (e.g. angle, area, line) and/or text can easily be drawn onto an image that has already been collected using the Overlay option in the image display window. You are encouraged to explore the drawing buttons in the Overlay toolbar – creating a scalebar on your image is described here.

1. Click Overlay in the Select toolbar of an open image window.
2. Select the desired scalebar thickness from the line width option buttons appearing half way down the Overlay image window submenu.
3. Click on the desired color of your scale bar from the color selection at the bottom of the Overlay submenu.
4. Click **1 μ m** in the Overlay submenu, then click in the vicinity of the image where you wish the scalebar to be drawn.
5. Drag the mouse over some distance on the image until the resulting scalebar registers your desired value. Release the mouse button to draw this scalebar overlay on the image.
6. Use **Save** or **Save As** in the image window to save it to a database.

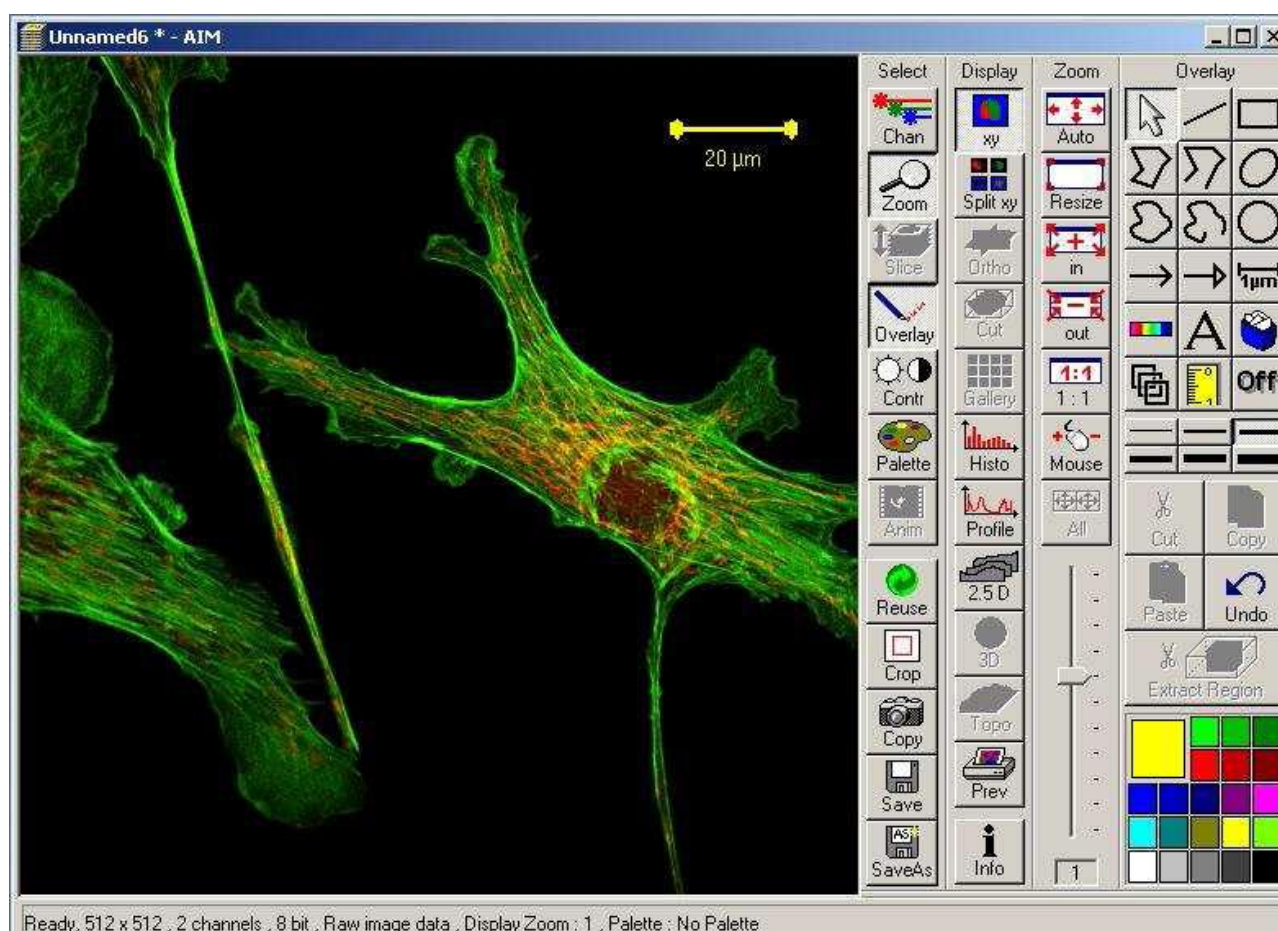

Animate

Some users will find it helpful to assess their time or z-stack data by animating it.

1. Select **Anim** from the Select toolbar of a stack's image window. The Animate window will open and the stack will immediately be animated.
2. **Speed 1** and **Speed 2** in the bottom section of the Animate window allow the user to control the speed of the animation.
3. To further control the animation, use the function buttons in the top section of this window to animate forward and/or in reverse, stop, fast forward, and fast back through a stack. **+** and **-** will animate the stack in forward or reverse by whatever increment you choose in the Increment slider in the bottom section of this window.
4. The Increment slider reduces the number of slices included in the animation to every nth slice as selected.

Gallery

Stack slices are organized in rows and presented in the order in which they were generated inside the image window. A 2-dimensional gallery of z-stacks over time can also be generated. Each slice's z-data (μm) and/or temporal interval can easily be displayed in every tile of the gallery. Z- or t-galleries can be saved as an image in a database for quick future reference. Additionally, a subset of images within a stack can be selected and stored for later use (e.g. to create a 3-D projection).

1. Click **Gallery** in the Display toolbar of the image window. A gallery of the entire stack is automatically generated and the Gallery toolbar becomes available in the image window. Click **Save** if you want to save the gallery to your database for quick future reference. Otherwise, a gallery view can always be generated from the stack at a later time.
2. For z-stacks taken over a time series, refer to the Gallery menu to select the format in which you'd like the gallery be displayed – **Z** , **Time** , or entire z-stacks over time, **Z + Time** .
3. To have the stack data (z distance or time interval) displayed in every tile of the gallery, click **Data** in the Gallery toolbar. Use the color selection button (located below **Data**) to ascribe a color of your choice to the gallery data display.
4. To separate a subset of images from the full image gallery, select **Subset** in the Gallery toolbar. Here, define new start and end points of the series using the **Start Slice** and **End Slice** sliders/data fields, or enter a value in the **Every n-th Slice** field if you would rather create a subset of every n-th slice of your choosing.

3-D Projection

The Projection function can render a single projection or a series of calculated projections at set angle increments around the X, Y, or Z axis. The user can choose between manipulating aspects of the projection's transparency or creating a projection that has maximum intensity.

The "Transparent" projection method decreases the brightness of each file in the projected stack to reveal structure in subsequent layers that would otherwise be hidden.

The "Maximum" projection method takes the intensity values of individual pixels in all sections and collapses them into one single illuminated image. The "Maximum" method is chosen when the maximum pixel intensity is desired to be represented in the projection.

Creating a maximum projection is described here. These instructions assume that an image stack is open and therefore available for projection

1. Select **3D View_ Projection** from the main menu. The Projection window will open.

2. Select the stack to be projected in the Source panel of this window.

Only stacks and images that are currently open are available for selection in the Source pulldown list.

3. To create an en face (straight-on) projection of all slices in the z-axis, select the Y radio button in the Projection panel. Leave the First Angle set to 0°, enter 1 in the **Number Projections** field, and set the **Difference Angle** field to 0°.

4. In the Transparency tab, select the Maximum radio button.

5. Generate the projection by clicking **Apply** located in the upper right corner of the Projection window.

The projection calculation can be monitored via the progress toolbar at the bottom of the image window.

6. If a sequence of projections at set angles has been created, it may be animated or viewed in a gallery via the Select and Display toolbars of the image window.

Exporting Files to .tif Format

Files can be exported in a couple of different ways – via the batch export macro, which allows the simultaneous export of multiple database items or the Export of Images function, which allows the export of individual database items – be they single confocal sections or a stack. The Export of Images method is described here.

1. Open your database and load (open) the file you would like to export.

2. Select **File_ Export** from the main menu. The Export Images and Data window will open.

3. In the **Save In** field, designate to which drive or directory the exported data should be saved.
4. Enter a name for the exported image or series of images in the **File name** field.
5. In the **Save as type** field, select the image format into which the file should be Exported.

When selecting an image format, pay heed to whether you are exporting a single confocal

image or a series (stack) of confocal images. Various image formats are supported (e.g. .bmp,

.jpg), we recommend TIF (.tif) format as it is lossless and widely usable.

For multi-channel images, you have the option of exporting individual color channels of data in monochrome (grayscale) if Raw data single or Raw data series image type is chosen.

6. Click Save. *When a z- or time stack file is exported, each stack slice is stored as an individual TIF image*

with a 3-digit numbered suffix appended to the designated file name.

Image formats

In the Export Images and Data window, you have several options how to export your images (Single option is for a single image, Series is for a Zstack):

Raw Data Single/Series: Use if you want to control the separation of labels into different RGB channels (e.g. if you want to have green channel as an own image file).

Exports only the original scanned data, i.e. brightness/contrast or pseudocolor changes are not applied to the exported image. Also, no overlay information is shown in a raw data image. This is the choice if you are going to analyze your image. Note that an image can only have three different channels (RGB), so if you have taken an image with four fluorochromes, you will have to export two images (one with three channels and another with one channel).

Contents of Image Window Single/Series: Image resolution is not determined by the frame size selected for scanning but by the image window size on the screen. Because the resolution may change when this option is used, it is not recommended.

Full Resolution Image Window Single/Series: Exports a full resolution image as determined by the frame size before scan (in contrast to the "Contents of Image Window single" option). No control over channels as in "Raw data single/series".

Will include scale bars and other overlays. Changes made in the image after scanning (e.g. brightness/contrast or pseudocolor changes) are also included so be aware that even if you took care not to have any saturated pixels in your original scanned image, you can still create saturated pixels by making post-acquisition changes. Those changes will remain in the image, if you use this exporting option.

Image window menu

All image window tools can be closed by pressing the corresponding button again. Depending on your current image (single/multichannel/Z stack etc.), some tools may not be active.

CHAN

Clicking on the CHAN shows the Channels toolbar. When you click on a channel button in this toolbar, you can then either turn off the selected channel by clicking the OFF button, or change the pseudocolor used for that channel by clicking on another color.

More color selection buttons can be created by pressing COLORS button. First define the hue of the new color in the larger window, and then select the saturation of the color by moving the arrow along the smaller window. Clicking the ADD button adds the new color button in the color selection window.

ZOOM

Zooms the image (does not affect scanning); after clicking on the ZOOM button, ZOOM toolbar becomes visible. ZOOMAUTO:

Automatically fits the image to the

size of the Image window. ZOOMRESIZE

and ZOOM 1:1: both restore the image

into its original size. ZOOM+:

Enlarges the image 200%. ZOOM:

Reduces the

image into half of its original size. ZOOMMOUSE:

After selecting this button, the

left mouse button can be used for enlarging the image, the right button for reducing

the size (cursor has to be over the image). The underlined functions can only be used

when ZOOMAUTO

is inactive. The zoom factor can also be adjusted by using the slider. The display box shows the zoom factor.

SLICE

Used for viewing individual images of a Z stack or time series. By dragging the slider, you can view the images one by one. The display box shows the number of the current image and the total number of images.

OVERLAY

By pressing OVERLAY, overlay toolbar becomes visible. SCALE button (1 micrometer scale bar shown in the button) allows you to draw a scale bar in your image. You can change the color of the selected scale bar by clicking on one of the color boxes. The length of the selected scale bar is adjusted by dragging.

You can measure area and lengths of objects drawn in the image: first draw an object using the drawing tools. Then select the object by clicking on it, and also click on the MEASURE tool (yellow ruler in the button). Depending on the object, either its length or area will be shown.

OFF removes the selected object; the button becomes ON, and clicking it again will show the object again. RECYCLE BIN tool deletes the selected object. It is also possible to drag objects into the RECYCLE BIN if you want to delete them.

CONTR

Changes the contrast and/or brightness either for each channel separately or all channels simultaneously. Usually not a very useful feature, as the settings are automatically optimized by the software. By clicking MORE, you can also adjust gamma; just remember that this adjustment should be described in your manuscript.

PALETTE

Pseudocolor palettes can be selected: RANGE INDICATOR is useful for determining the settings for DETECTOR GAIN and AMPLIFIER OFFSET. RAINBOW can be used for indicating intensity values using a color scale instead of a brightness scale. GLOW SCALE is a combination of color and intensity scales.

ANIM

Animation of frames of a Z stack or time series.

Speed 1: very fast; speed 2: slower.

REUSE

Allows you to load acquisition parameters of the selected image, provided that the image is in LSM format in an MDB database.

CROP

Defines the zoom area for scanning (see chapter 6.1.4).

COPY

Copies the current image into the clipboard.

SAVE

Saves the current image into an MDB database without showing the dialog window.

SAVE AS

Saves the current image, shows a dialog window in which you can select the database and name the image.

XY

Displays a single image; multiple channels are in superimposed mode.

SPLIT XY

Shows channels in separate windows; the last window shows the superimposed mode.

ORTHO

Shows an orthogonal view (= xy, xz, and yz planes of Z stacks). XY plane is in blue, XZ in green, and YZ in red. The section plane can be positioned at any XYZ coordinate of the Z stack by moving the sliders in the Orthogonal toolbar.

Alternatively, the number of the slice can be entered in the input box.

By clicking on the DIST button it is possible to measure distance in 3D: Click on MARK button to define the first XYZ point. Set the second point by either moving the X,Y, and Z sliders or the green, red, and blue lines in the image. The distance between the two points is shown in micrometers at the bottom of the Orthogonal toolbar. The projections of the spatial distances are shown in yellow in the image. 2D DVC button can be used for 2D deconvolution, which improves the axial (Z) resolution.

CUT

From a Z stack volume, you can select a section plane, which can be of any orientation, and the CUT function will create the corresponding Z stack. Clicking on CUT will show the Cut toolbar. The cut plane is determined by adjusting the X,Y,Z, Pitch, and Yaw sliders.

The selected cut plane is shown in red at the bottom of the Cut toolbar, as well as in the image window. RESET ALL restores the original settings. TRILINEAR INTERPOLATION improves the image quality by applying 3D interpolation.

GALLERY

Displays all images of a Z stack, lambda stack, time series, or their combination side by side. In the Gallery toolbar, clicking on the DATA button shows either the Z slice distance, wavelength, time, or their combination, whichever is relevant. COLOR button allows you to change the pseudocolor for all images at the same time. Clicking on SUBSET, the Subset window opens, enabling you to select only a subset of the images: select the START SLICE and END SLICE for the new subset by dragging

the sliders. Be aware that when you click on the OK button, the slices not included in the new subset will be permanently lost.

HISTO

Displays a histogram (distribution of pixel intensities) of an image, gives size and intensity measurements for a given area, as well as analyzes colocalization between two channels.

Histogram

In the histogram toolbar, the following functions are for the histogram display:

SKIP BLACK: Pixels that have the gray (intensity) value of zero are not shown in the histogram

SKIP 4%: Pixels that have the lowest 4% of the gray (intensity) values are not shown in the histogram

SKIP WHITE: Pixels that have the highest gray (intensity) value (255 for an 8bit image and 4095 for a 12bit image) are not shown in the histogram

STEP: Determines the number of intensity levels shown in the histogram. Step 1 corresponds to 256 intensity levels for an 8bit image, step 64 to $256/64 = 4$ intensity levels

SHOW IMAGE: Shows the image window next to the histogram

SHOW TABLE: Shows the numerical values of the histogram in a table

COPY TABLE: Copies the histogram table into the clipboard

SAVE TABLE: Saves the histogram table as a text file (.txt)

Area measurements

In the histogram toolbar, the following functions are for the area measurements:

AREA: Used for defining the area for size and intensity measurements by using the Area tools at the bottom of the histogram toolbar. First, define the area using the drawing tools. Then, make the necessary adjustments for the area histogram using the following tools:

STEP: Determines the number of intensity levels shown in the area histogram. Step 1 corresponds to 256 intensity levels for an 8bit image, step 64 to $256/64 = 4$ intensity levels

LOW: Sets the threshold intensity level; pixels with lower gray values than the threshold value are masked with the color selected using the COLOR selection button below the low threshold value box.

HIGH: Pixels with higher gray values than the threshold value are masked with the color selected using the COLOR selection button below the

high threshold value box

Mean intensity value, standard deviation of the intensity, and the size of the nonmasked area are shown below the COLOR selection buttons.

Instead of defining the range of intensity values for area measurements, you can also use the Mask tools for masking areas masked pixels are not included in measurements:

MASK: Enables the Mask mode, in which masked areas can be defined by ink

FLOOD FILL: Fills the defined area with the color selected under MASK

COLOR SELECTION: Defines the color of a mask

CLEAR MASK: Removes the mask color

Colocalization measurements

In the histogram toolbar, the following functions are for the colocalization measurements:

COLOCALIZATION: Shows a scatter plot in which the X coordinate of the pixel Px presents the intensity value of that pixel in channel 1, and the Y coordinate presents the intensity value of Px in channel 2. If there is complete colocalization between the channels, the scatter plot should show a diagonal line from the bottom left corner to the top right corner.

SHOW TABLE: Shows the numerical values of the scatter plot in a table

AREA: Shows the image window next to the scatter plot

CROSSHAIR: Displays movable crosshair that, when correctly adjusted, divides the scatter plot into four regions: bottom left region: background intensities; bottom right region: pixels that have intensity values above threshold only in channel 1; top left region: pixels that have intensity values above threshold only in channel 2; top right region: pixels that have intensity values above threshold both in channel 1 and 2.

Note that because there are no stringent criteria how to set the crosshair (threshold values for each channel), this is always a somewhat arbitrary method.

THRESHOLD: SET FROM IMAGE ROIS: Sets background threshold from ROI (region of interest) drawn in the image

INVERT MASK: Inverts the mask or scatter plot

SOURCE 1: Selection of channel 1 and its color via the Color box

SOURCE 2: Selection of channel 2 and its color via the Color box

MASK: Select either RGB or OVERLAY for the mask; selection of mask color via the Color box

Drawing tools can be used for making ROIs in the scatter plot and image, which are interactively linked (selecting a ROI in the image shows a scatter plot for those

pixels; selecting a ROI in scatter plot shows the corresponding pixels in the image).

In the table, the following measurements are shown:

Number of pixels (in the whole image or ROI)

Area (in the whole image or ROI)

Mean intensities and SD (in the whole image or ROI)

Colocalization coefficients

Weighted colocalization coefficients

Manders' overlap coefficient

Pearson's correlation coefficient

Remember that overlap in distribution patterns does not indicate that the labeled molecules interact with each other, or that their distribution patterns correlate with each other.

PROFILE

Displays the intensity distribution for each channel along a line drawn on the image. Also shows the numerical intensity values that can be saved. By using markers (red and blue), you can measure intensity difference and distance between two points along the line.

In the Profile toolbar, the following functions are available:

The drawing tools can be used for drawing either a straight or curved line along which the intensity values will be shown. You can also select the thickness and color of the line; these will not affect the measurements.

DIAGR. IN IMAGE: Shows the intensity diagram as an overlay on the image

MARKER 1 (red): Shows a red circle marker in the image, and a red line marker in the intensity diagram

MARKER 2 (blue): Shows a blue circle marker in the image, and a blue line marker in the intensity diagram

ZOOM: Zooms on the intensity diagram; click and drag a rectangle on the graph and that area will be enlarged. Can be applied several times. Rightclick will reset the original size

RESET ZOOM: Resets the zoomed intensity diagram into the original size

SHOW TABLE: Shows the numerical intensity values in a table

COPY TABLE: Copies the table into the clipboard

SAVE TABLE: Saves the table as a text file (.txt)

2.5D

Shows pseudo3D

intensity distribution for each channel. Handy for presentations.

For Z stacks, the slice selected using SLICE in the Image Window menu is displayed. Scrollbars around the image are used for rotating the image around the horizontal and vertical axes. The right scrollbar on the right side of the image controls the intensity scale of the image.

In the Pseudo 3D toolbar, the following functions are available:

PROFILE: Vertical polygon display

GRID: Horizontal grid display

FILLED: Color display, in which MONO, RAINBOW, and SIX STEP options

CHANNEL: selection of the channel displayed in case of a multichannel image.

Prev

Composition of images, diagrams, tables, and text for printing. However, there is no printer connected to the Meta computer.

Info

Displays the parameters that were used when the image was acquired. This information will be stored together with the image in the MDB database. If you save your image in TIFF format, none of this information will be stored, just the image.

Meta detector

META detector (ChS) is a spectral detector which means that you can freely select the range of emission wavelengths that you want to use for detection. It consists of 32 photomultipliers, each of which covers a spectral range of 10.7 nm (total range about 340 nm)

Lambda mode

You may want to use META detector in case the emission filters available are not optimal for your fluorochrome. Additionally, you will get the spectral emission (intensity for each wavelength within your selected range). When you scan in this so called lambda mode, the result will be a lambda stack that shows the signal over the spectral range selected. It is also possible to combine lambda mode with Z mode and/or time series.

However, META detector is less sensitive compared to the other detectors, so you should have a strong signal if you want to use the META detector. Also, you may need to open the pinhole more than usually (try using e.g. 3 Airy units).

To use lambda mode, select LAMBDA MODE in the configuration control window.

Set the excitation and main dichroic beam splitter (HFT n) as in the CHANNEL MODE. For selecting the detected wavelengths, either use the slider or write the starting/ending wavelengths in the proper input boxes. When you click on the CONFIG button, you can save and load lambda configuration. NUMBER OF PASSES will tell you how many scan are needed to cover the required spectral range. Proceed to SCAN as usual.

For separation of spectral signals, you have two options: either LINEAR UNMIXING or ONLINE FINGERPRINTING.

Linear unmixing

META detector and linear unmixing can be used to separate signals from two or more fluorochromes with overlapping emission spectra. Also, autofluorescence can be separated from the true signal.

In linear unmixing, the software will calculate for each pixel how much of the signal is derived from each spectral component that needs to be separated from the others, based on the reference spectrum for each component. In order to make a reference spectrum, you need to have control specimen that are each stained with only one of the fluorochromes whose spectra need to be separated. In case of autofluorescence, the control is simply an unstained specimen.

LINEAR UNMIXING is used after you have acquired a Lambda stack (using META detector). In the MAIN menu, select PROCESS, and then UNMIX. Insert in the stage the specimen from which you want to acquire a reference spectrum. It is essential that the specimen is only stained with the fluorochrome for which you want to get a reference spectrum. Select the channel for the reference spectrum and name it. Press the LOAD FROM IMAGE button. Continue until you have acquired reference spectra for all the fluorochromes whose spectra you want to separate from each other. In the Source panel of the UNMIX window, click on the arrow button and select the image you want to use for unmixing by clicking on it. In the Parameters panel of the UNMIX window, select all options. The RESIDUALS channel will show you the amount of signal that could not be assigned for any of the unmix channels. ASK FOR THE BACKGROUND ROI option will ask you to mark an area in the image that represents background. This background channel should be defined for optimal linear unmixing. After clicking on APPLY, a new window that shows the result of the unmixing will open.

Online fingerprinting

ONLINE FINGERPRINTING does the unmixing during scanning, and the lambda stack will not be shown or stored. If you want to use this option, you must have saved the reference spectra in the PROCESS/UNMIX window in advance (see previous chapter). Select ONLINE FINGERPRINTING in CONFIGURATION CONTROL window. Load the reference spectra using the RS1 ... 8 control buttons. Set the excitation and main dichroic beam splitter (HFT n) as in the CHANNEL MODE. For selecting the detected wavelengths, either use the slider or write the starting/ending wavelengths in the proper input boxes. When you click on the CONFIG button, you can save and load configurations. NUMBER OF PASSES will tell you how many scans are needed to cover the required spectral range. Proceed to SCAN as usual.